Operation Manual for
QM-ZSD-01E gas release indicator



1. General description

The QM-ZSD-01E is the releasing interface which can be connected with Agent Releasing Control System or Starter, and is applied in conspicuous place of exit or entrance. When the Agent Releasing Control System is activated, The QM-ZSD-01E will show "DON'T ENTER WHILE RELEASING GAS" and alarm at the same time.

2. Specifications

1) Working environment：


   Temperature：-10℃～+55℃　　Humidity：≤95%（40℃）

2) Working voltage：DC18V～24V

3) trigger current：≤150mA

3. Instructions

1) Dimension：

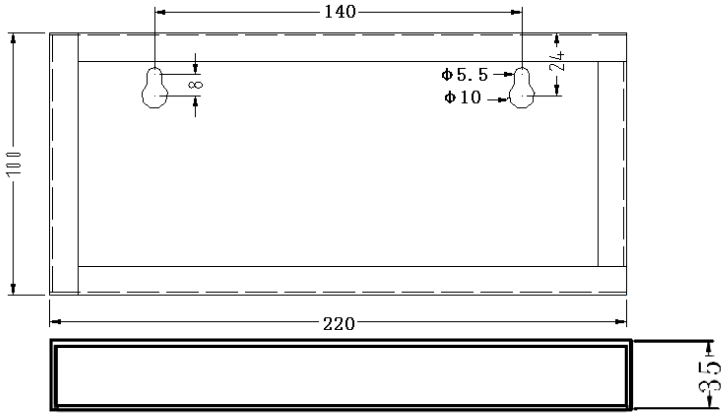

2) Connection:Two non-polarized input

4. Equipment installation and instructions:

1) Don’t use the gas release indicators in such environment: condensation, high temperature, greasy, humid or erosive environment;
2) Don’t mount or debug the indicators without professional direction; don’t applying power until you are sure it is correctly wired.
3) Please cut off power immediately when there is any abnormity. Apply power after troubleshooting.
4) When there are problems beyond your capability in the indicators, don’t disassemble or repair it by you. Please contact our authorized agent or our customer service as soon as possible.